
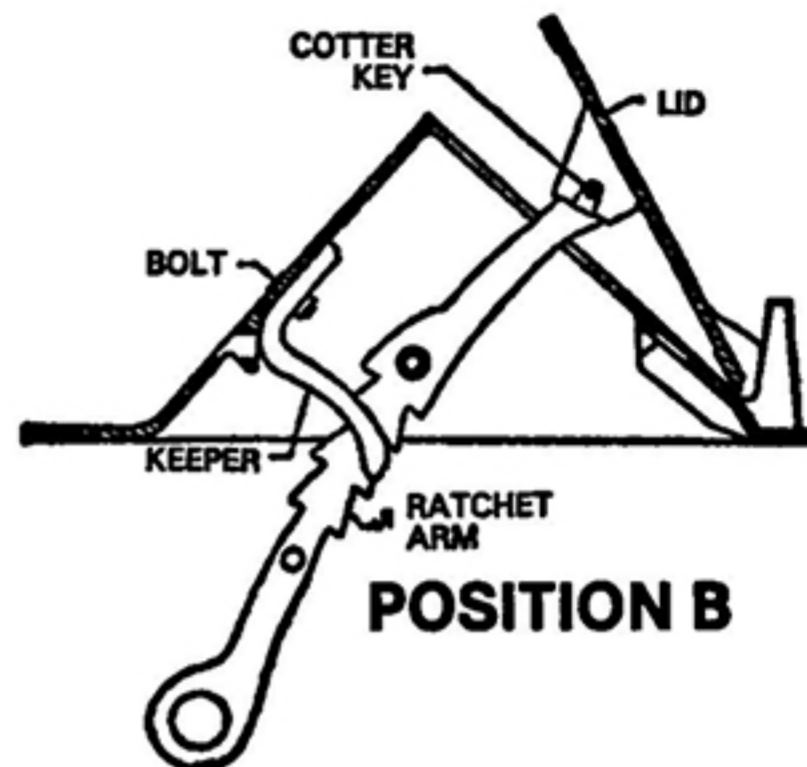


ASSEMBLY

INSTRUCTIONS

Poker Control Dampers

Allow 1/2" Clearance in Masonry at Each End for Expansion

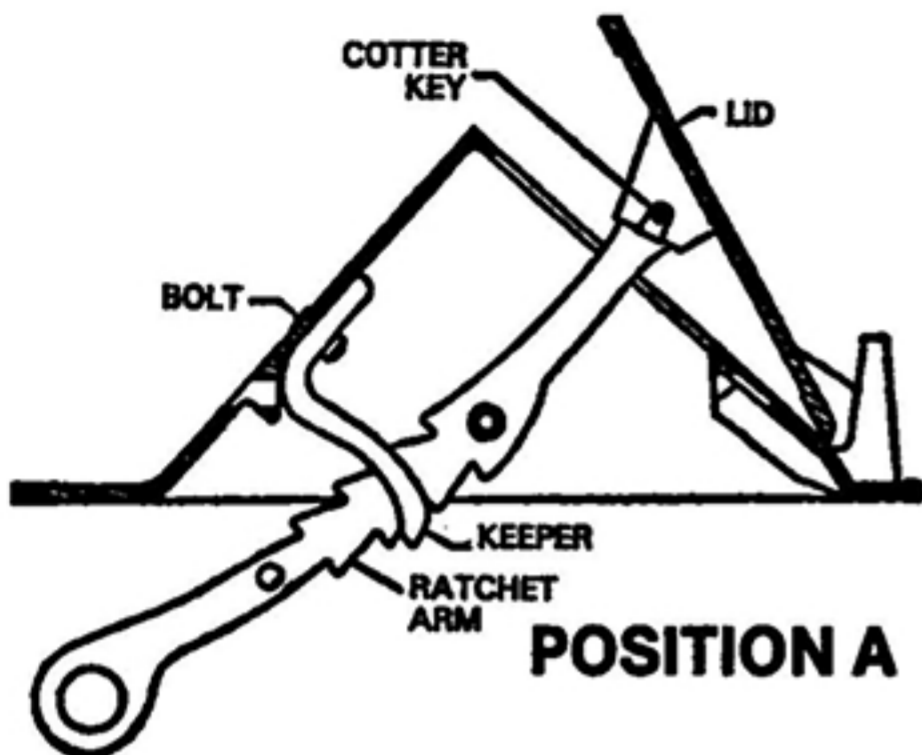

1. Bolt **KEEPER** in place. Insert bolt thru **TOP MOST HOLE** on front center face of damper frame and thru hole on **KEEPER**.

2. Place **RATCHET ARM** thru **KEEPER** and fasten lid with cotter key. Finished assembly shown in illustration above.

Some contractors install damper two courses of brick above actual fireplace opening. In installations of this type a long ratchet arm is required. To lengthen **RATCHET ARM** reverse the position from that shown in "A" to "B" above. **KEEPER** is assembled the same for both positions. No extra parts are required.

IMPORTANT

BEFORE ROTARY CONTROL ADAPTATION

THIS DAMPER HAS BEEN INSPECTED AND PREPARED FOR POKER CONTROL INSTALLATION ONLY. IF ROTARY CONTROL IS TO BE USED, ASSEMBLE DAMPER BEFORE INSTALLATION AS SHOWN ON THE BACK OF THIS CARD TO INSURE PROPER FUNCTION. SOME REAMING OF HOLES MAY BE REQUIRED.

VESTAL MANUFACTURING

P.O. Box 420

Sweetwater, Tennessee 37874

VESTAL