

# Elite Fireplace Facings



## Shawnee Mission, KS

---

### Installation Instructions for ECH - Canopy Hood

---

1. Remove protective film from hood.
2. Place hood up into the door track.
3. If you plan to pre-drill holes, mark where those holes need to be. Drill 1/8" holes where marked.
4. Use self-tapping screws to fasten hood to the door track and sides of the fireplace opening.
5. Wipe the hood with a soft polishing cloth to remove any fingerprints.

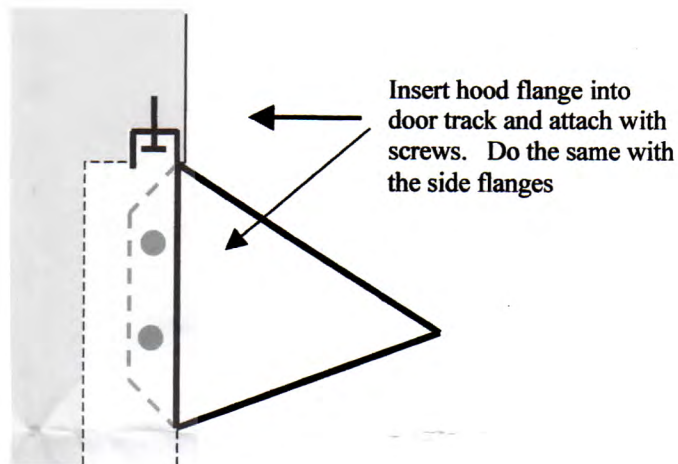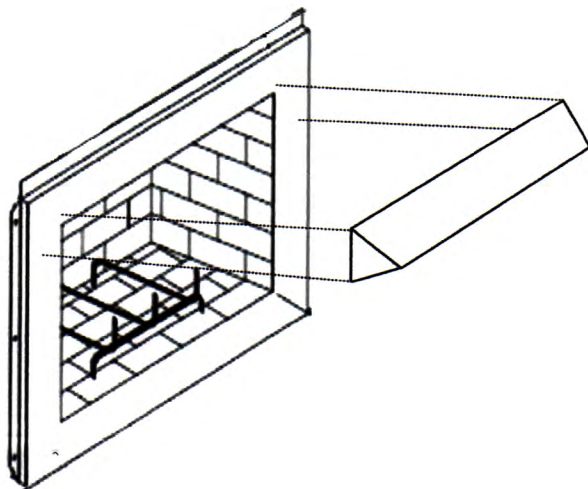

## WARRANTY

Elite Fireplace Facings, Inc. makes no warranty, either expressed or implied, regarding its facings or hoods, and especially does not warrant its fitness for any particular purpose or merchantability. No officer, employee, agent, representative, or distributor of Elite Fireplace Facings, Inc. has the authority to change or modify this warranty either orally or in writing. **Elite Fireplace Facings, Inc. shall not be liable for any incidental or consequential damages arising or alleged to have arisen by the use or installation of this product.**