



# Installation Manual of StreamLine 1 LED Linear: Suspended

## 1. Installation kits



Flexible cable mounting bracket 2PCS




Self-tapping KA4\*30 screw 2PCS




Self-tapping PM3\*8 screw 6PCS



Plastic expansion tube 2PCS

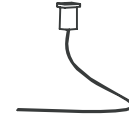

Fixing basestainless steel cable 2PCS

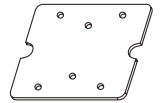

Connector 1PCS

## 2. Single LED Linear Mounting Space and Steps




<p>①</p> <p>Distance between two drilling holes</p>	<p>②</p> <p>Drill two desirable holes on the ceiling as shown above and the holes should match with M6-M8 self-tapping screw.</p>	<p>③</p> <p>Tap the plastic expansion tube into the hole.</p>
<p>④</p> <p>Let KA4*30 screw go through fixing base A and then tapped into plastic expansion tube. Rotate fixing base B into base A.</p>	<p>⑤</p> <p>Attach flexible cable mounting bracket to linear on two sides by using supplied PM3*8 screws.</p>	<p>⑥</p> <p>Press bracket and let cable go through holes well.</p>
<p>⑦</p> <p>According to requirement, adjust linear through flexible cable mounting bracket. Double check cable holds tightly.</p>	<p>⑧</p> <p>Remove the front cover by tools.</p>	<p>⑨</p> <p>Break through the hole of the cover by cutting nipper. Put AC wire and dimmable wire into LED linear. If there is unnecessary to dim, no need to connect dimmable wire.</p>
<p>⑩</p> <p>Connect N, L, GND, Dimmable wire optional well. After connection, put back the cover. (If there is unnecessary to dim, no need to connect dimmable wire)</p>	<p>⑪</p> <p>Installation is finished. If the linear does not look horizontally, adjust the flexible bracket and make it horizontally.</p>	

## 3. Multiple LED Linear Mounting Space and Steps


①

Distance between two drilling holes in row linear

Drill desirable holes on the ceiling as shown above and the holes should match with M6-M8 self-tapping screw. Tap the plastic expansion tube into the hole. Let KA4\*30 screw go through fixing base A and then tapped into plastic expansion tube. Rotate fixing base B into base A.

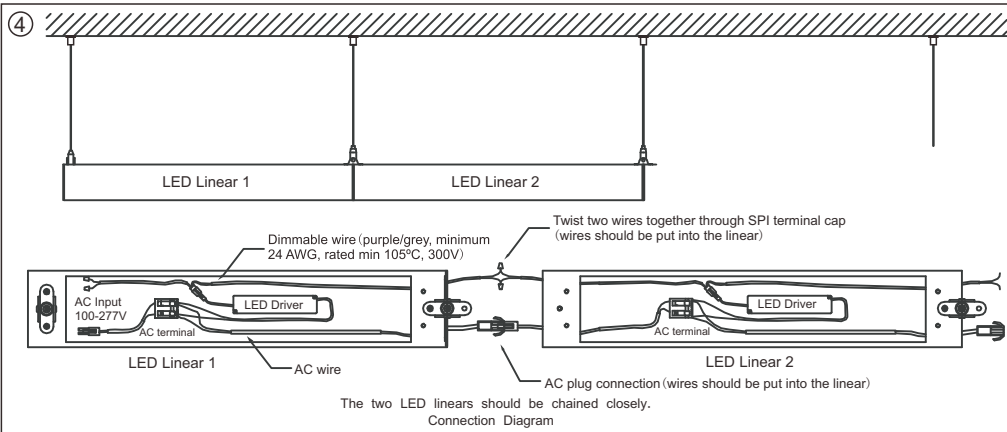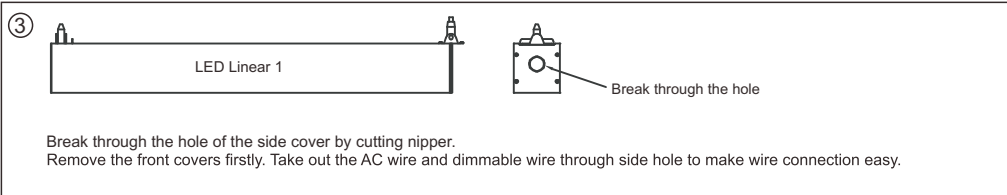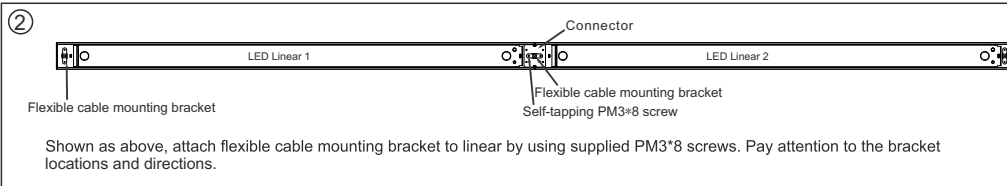

Lift LED linear 1 firstly and then lift up LED linear 2's one side with flexibale cable mouting bracket. Connect two linears' AC wire and dimmable wire together and put back the wire into either linear. Then Fixate the flexible bracket by supplied PM3\*8 screw.

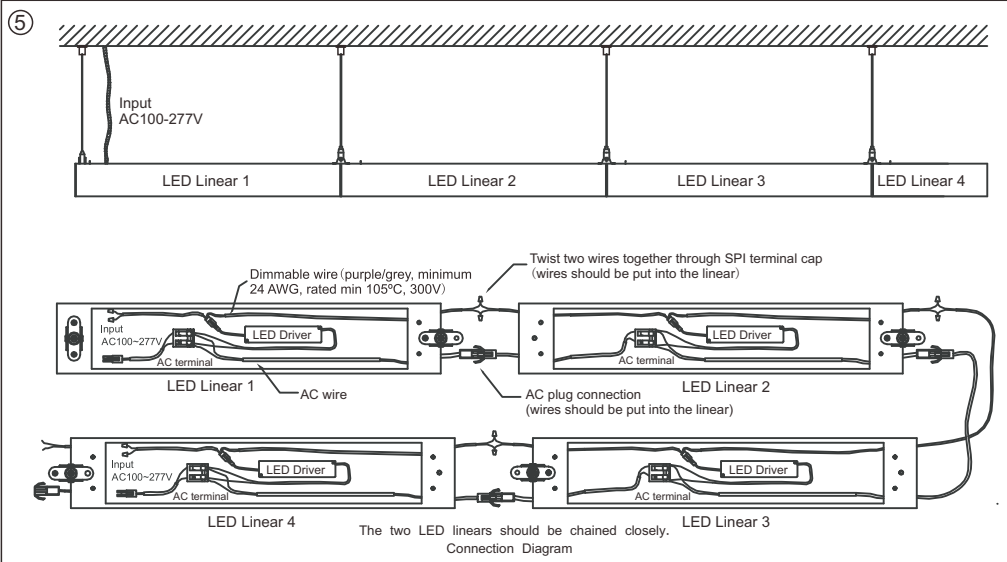

Lift up needed LED linears in cable-suspended ways successively. Let AC input wire go through front cover hole of LED linear 1. Connect L, N, GND (Dimmable wire optional) well correspondingly. Double check and then put back cover.

⑥ Put back other covers. The installation is finished.

⑦ Note:

Strongly Recommended 0-10V Dimmers for LED Linear Light when join with 7pcs together.

Manufacturer or Brand	Model Number
LEVITON	IP710-40F
Legrand	RH4FBL3P

⚠

**MAKE SURE POWER OFF BEFORE INSTALLATION OR DISASSEMBLY.**

⚠

**CHAIN-HANGING: LED LINEAR CAN BE JOINED TOGETHER AS NEEDED, BUT THE TOTAL NUMBER OF FIXTURES SHOULD BE NO MORE THAN 7 PCS (INCLUDING 7 PCS).**

⚠

**TWO WORKERS ARE NEEDED TO INSTALL THE LINEAR.**

⚠

**THE HOLE OF FRONT COVER AND HOLE OF SIDE COVER ARE OPEN ONLY IF NEEDED.**